




# COOKTOP AND CONTROL PARTS

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2

(White) (Almond) (Black) (Designer White)

30" ELECTRIC  
FREESTANDING  
RANGE  
SELF CLEAN OVEN  
DESIGNER STYLE

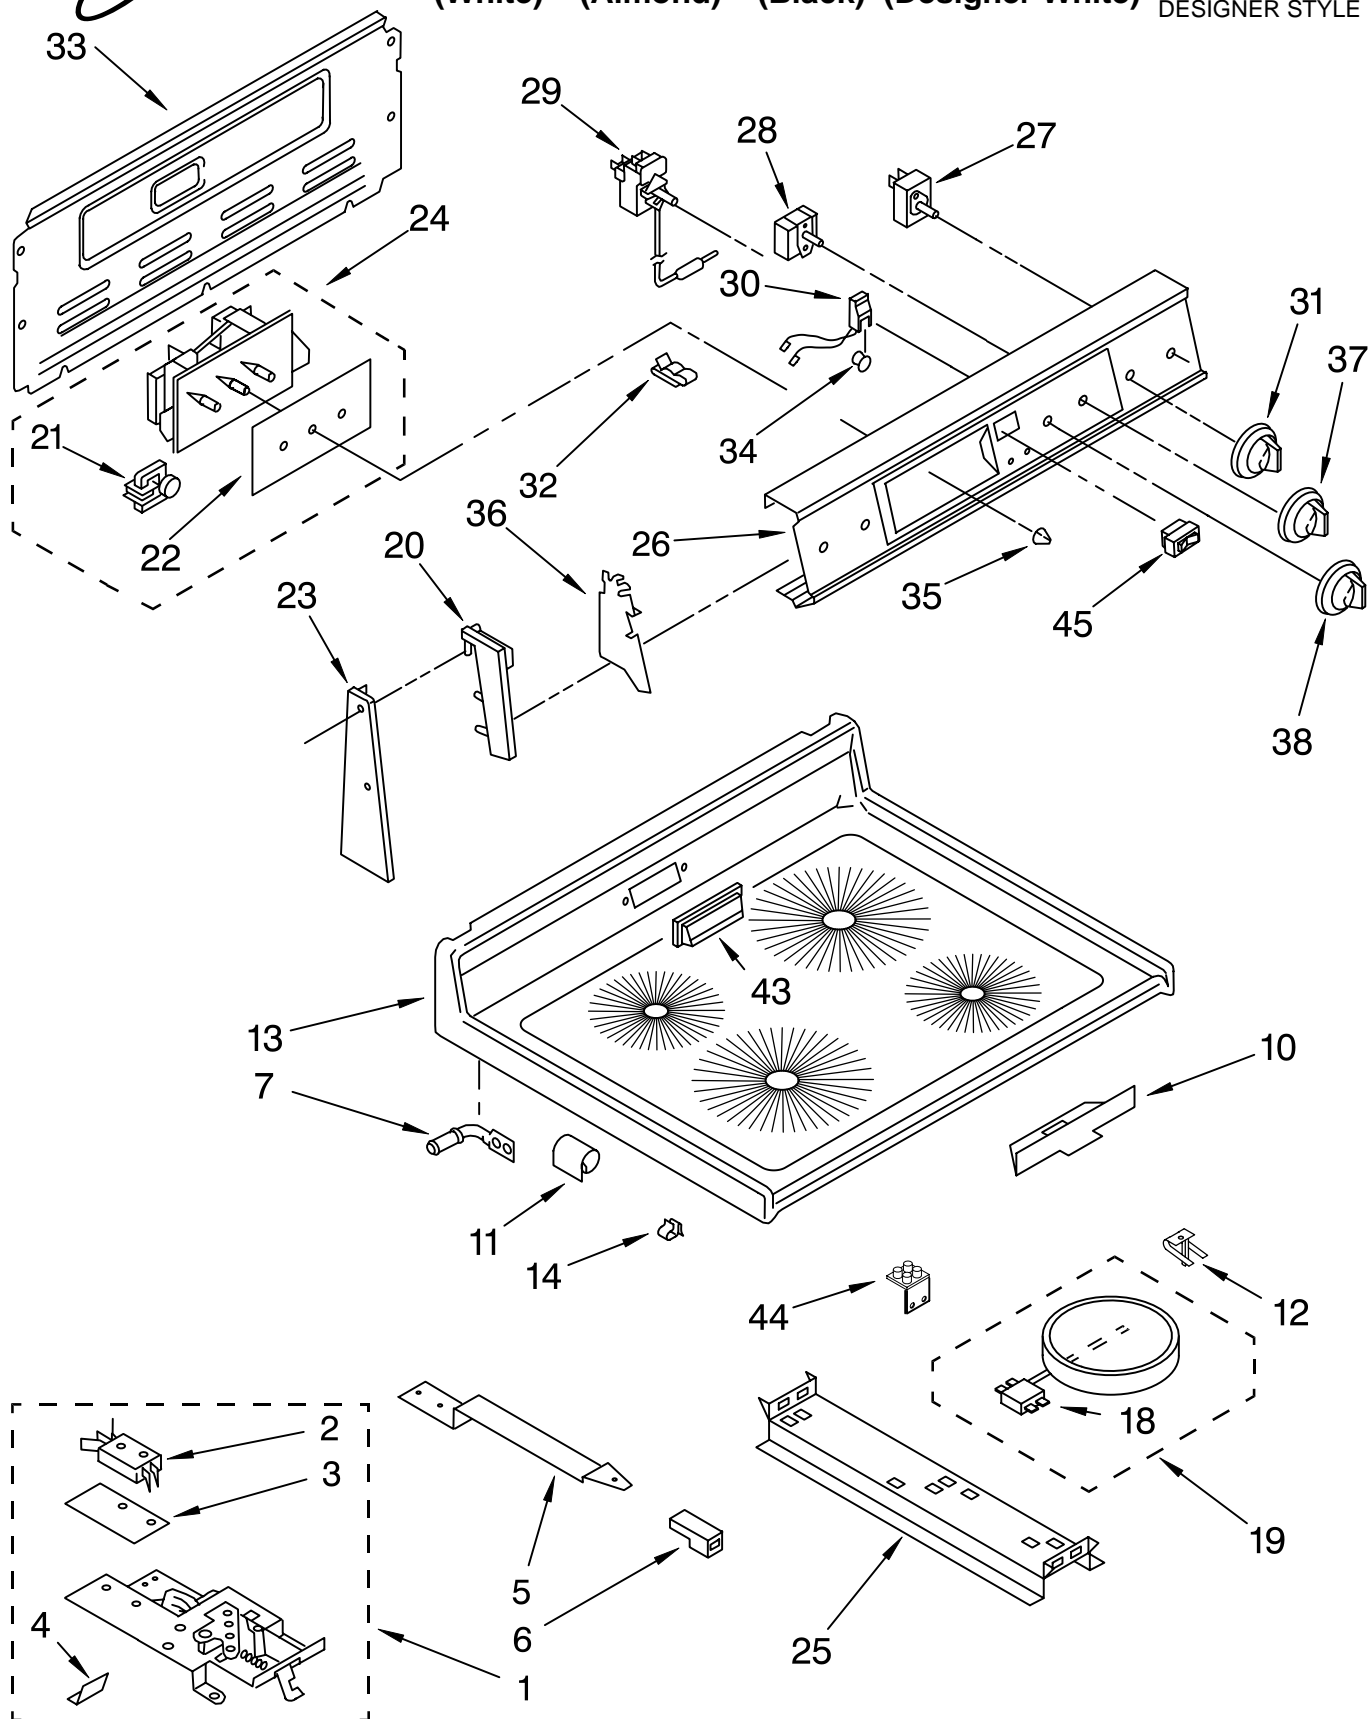

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# COOKTOP AND CONTROL PARTS

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2


(White) (Almond) (Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			13		Cooktop	27		Switch, Infinite
				3176527	White		3148952	LR & RF
				3176528	Almond		3148955	LF & RR
				3176529	Black		308119	Screw (8)
				3176530	Designer White	28	3148419	Switch, Selector
				3367670	Screw (2)		3150344	Screw, (2)
1	3171153	Latch Assembly	14	311311	Clip, Wire	29	3148933	Thermostat, Oven
	343641	Screw,	18		Limiter, Temp.		311932	Screw,
		10-16 x 1/2 (2)		3149129	180 MM - LR			6-32 x 1/4 (2)
2	308185	Safety Switch		3183972	200 MM - RF	30		Light, Indicator
	98106	Screw (2)		3183974	230 MM - RR		3169188	(Surface Unit)
3	309245	Insulator, Switch		3183973	250 MM - LF		314031	(Oven Unit)
4	313035	Shield, Latch	19		Element, Surface	31	3183118	Infinite Control
		Terminal			(Includes No. 18)			Knob (4)
	309258	Screw,		3183646	180 MM - LR		3183117	Designer White Mdl
		6 x 3/8B (2)		3183647	200 MM - RF	32	313570	Clip, Tube
5		Handle, Latch		3183648	230 MM - RR	33	3187332	Cover, Control
	3169081	Black		3183649	250 MM - LF		343641	Screw,
	3150175	Designer White	20	313230	End Cap R.H.			10-16 x 1/2 (8)
	308422	Screw,		313231	End Cap L.H.	34	313101	Lens, Amber (2)
		10-24 x 1/2 (2)		254225	Screw (4)	35	3169182	Timer Knob (3)
6		Latch Knob	21	309822	Motor, Timer		3169184	Designer White Mdl
	3148684	Black		246132	Screw (2)	36	313608	Shield, Glass (2)
	3150174	Designer White	22	313513	Glass, Timer		246132	Screw,
	155023	Screw	23	313191	End Trim R.H			8A x 3/8 (2)
7	307966	Pin, Top (2)		313190	End Trim L.H	37	3183115	Selector Knob
	343641	Screw,		254225	Screw (4)		3183116	Designer White Mdl
		10-16 x 1/2 (2)	24		Timer, Clock	38	3183103	Thermostat Knob
10	3169237	Shield, Probe		661458	Black with Chrome		3183104	Designer White Mdl
11	307965	Bracket, Top (2)		3169272	Designer White Mdl	43		Cover, Vent
	343641	Screw,		246132	Screw (2)		3149011	White
		10-16 x 1/2 (4)	25	3148809	Bracket, Mounting		3149012	Almond
12	3149191	Spring,		98520	Screw (6)		3181829	Black
		Element (8)	26	3184400	Control Panel		3149190	Clip (2)
	246119	Screw (8)		3184401	Designer White Mdl	44	3150662	Light, Indicator
				312604	Screw (4)	45	3148564	Rocker Switch
							3149360	Designer White Mdl

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# UNIT PARTS

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2  
(White) (Almond) (Black) (Designer White)

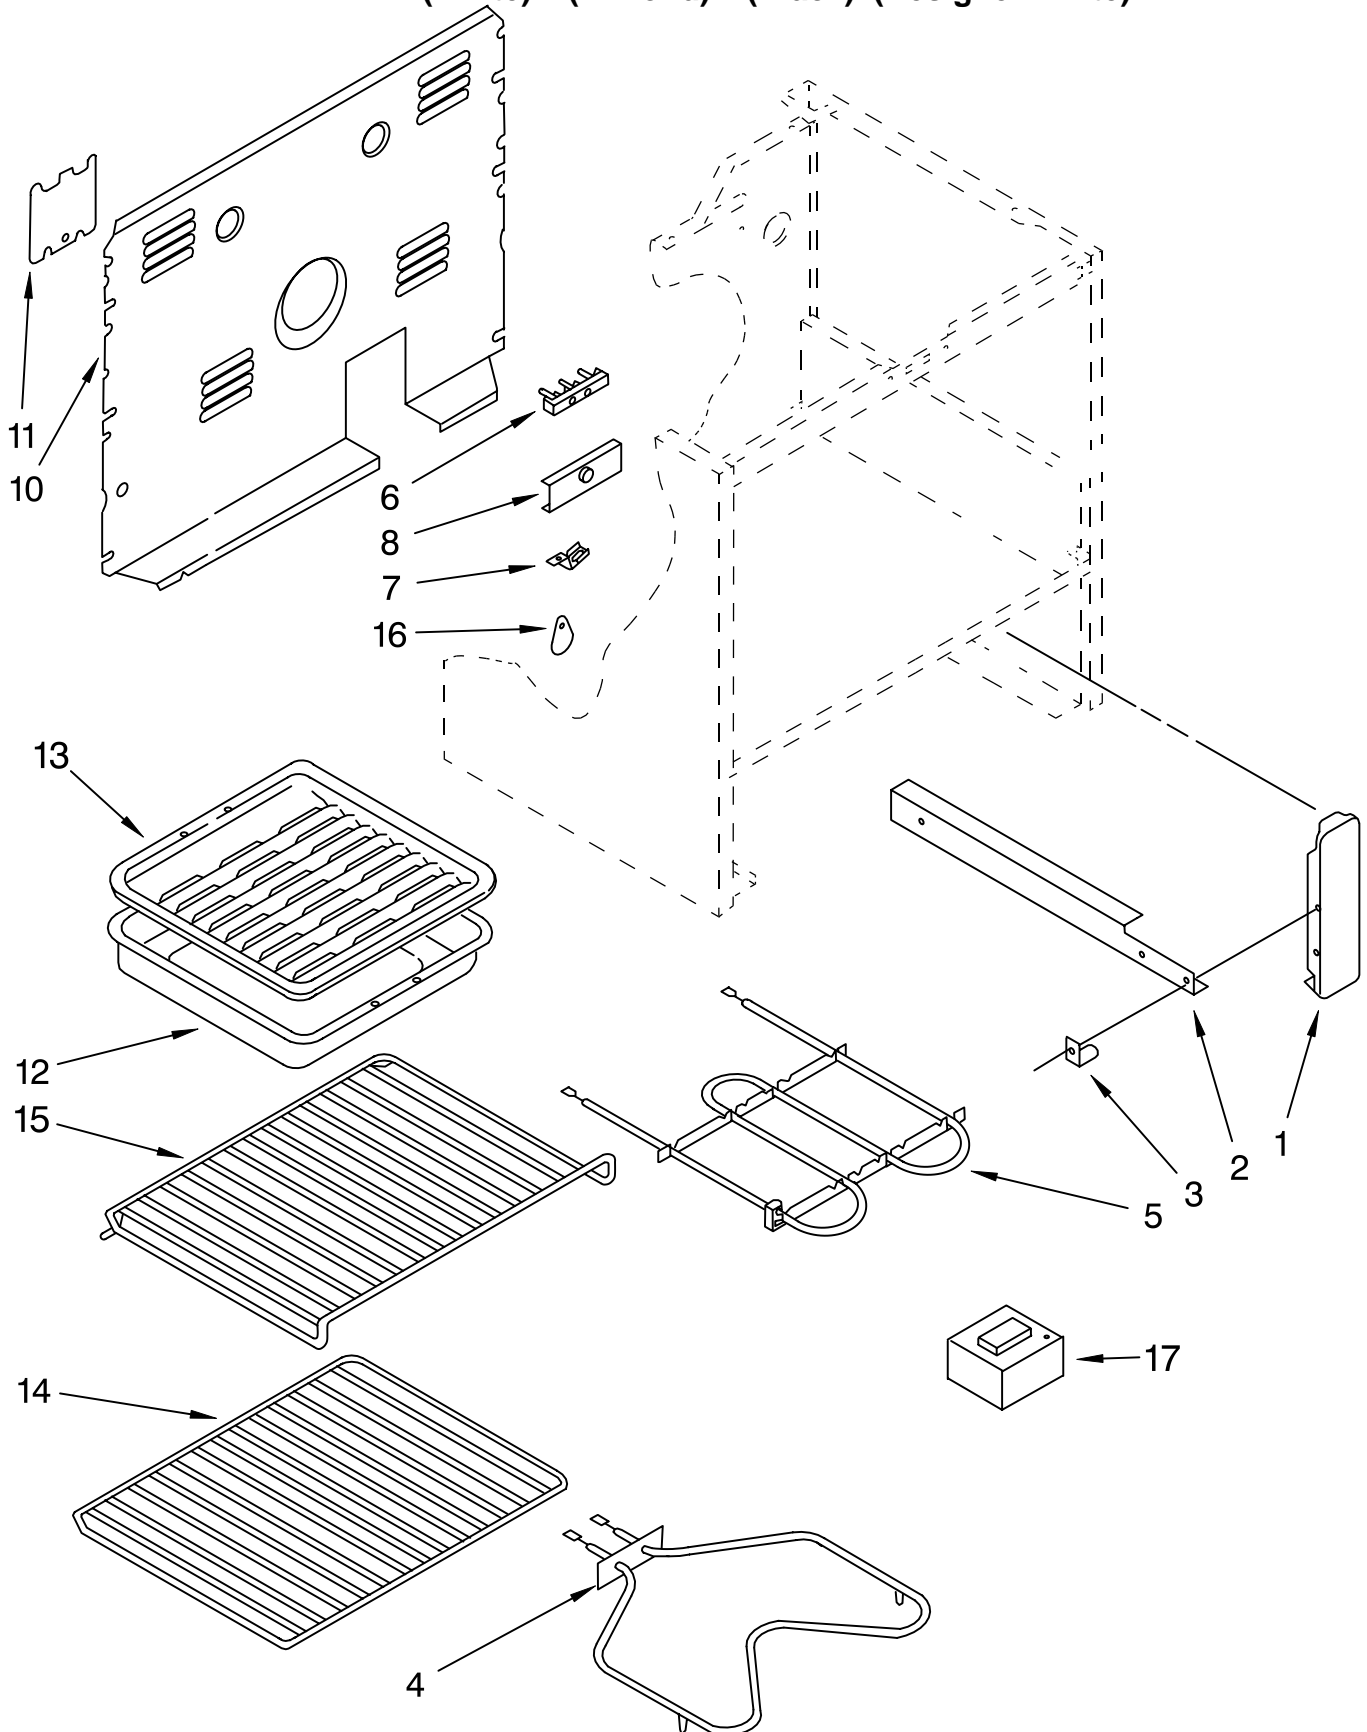

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# UNIT PARTS

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2


(White) (Almond) (Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			6	258076	Terminal Block	15	308172	Rack, Oven (Offset)
				98884	Screw, 10-16 x 1 (2)	16	311982	Plate, Cover (2)
				112432	Nut (6)		3150532	Screw, (2) 10-32 x .437
1	307981	Bracket, Mounting (2)	7	308498	Ground Strap	17	3149258	Block, Balance
	343641	Screw (5)		313660	Clip		340184	Screw (1) 10-16 x 1 1/2
2	3149255	Rail R.H.	8	690989	Screw, 10-32 x 1/2	Following Parts Not Illustrated		
	3149256	Rail L.H. (Includes Illus. 3)		3150190	Bracket, Service			
	343641	Screw, 10A x 1/2 (2)		343641	Screw, 10-16 x 1/2 (2)			
3	3149257	Glide, Front (2)	10	3148975	Cover, Rear			
	307748	Screw (2)		343641	Screw, 10-16 x 1/2 (7)			
4	661170	Unit, Bake	11	307972	Cover, Service		3169093	Insulation, Wrapper
	3150532	Screw, 10-32 x 7/16 (2)		343641	Screw, 10-16 x 1/2 (2)		3169094	Insulation, Oven Back
5	660579	Unit, Broil	12	3169076	Pan, Broiler		814091	Anti-Tip Kit (Floor Mount)
	3150532	Screw, 10-32 x 7/16 (2)	13	3147563	Rack, Broiler		3183488	Scraper, Glass
			14	308173	Rack, Oven (Straight)		3184477	Cleaner, Glass

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2  
(White) (Almond) (Black) (Designer White)

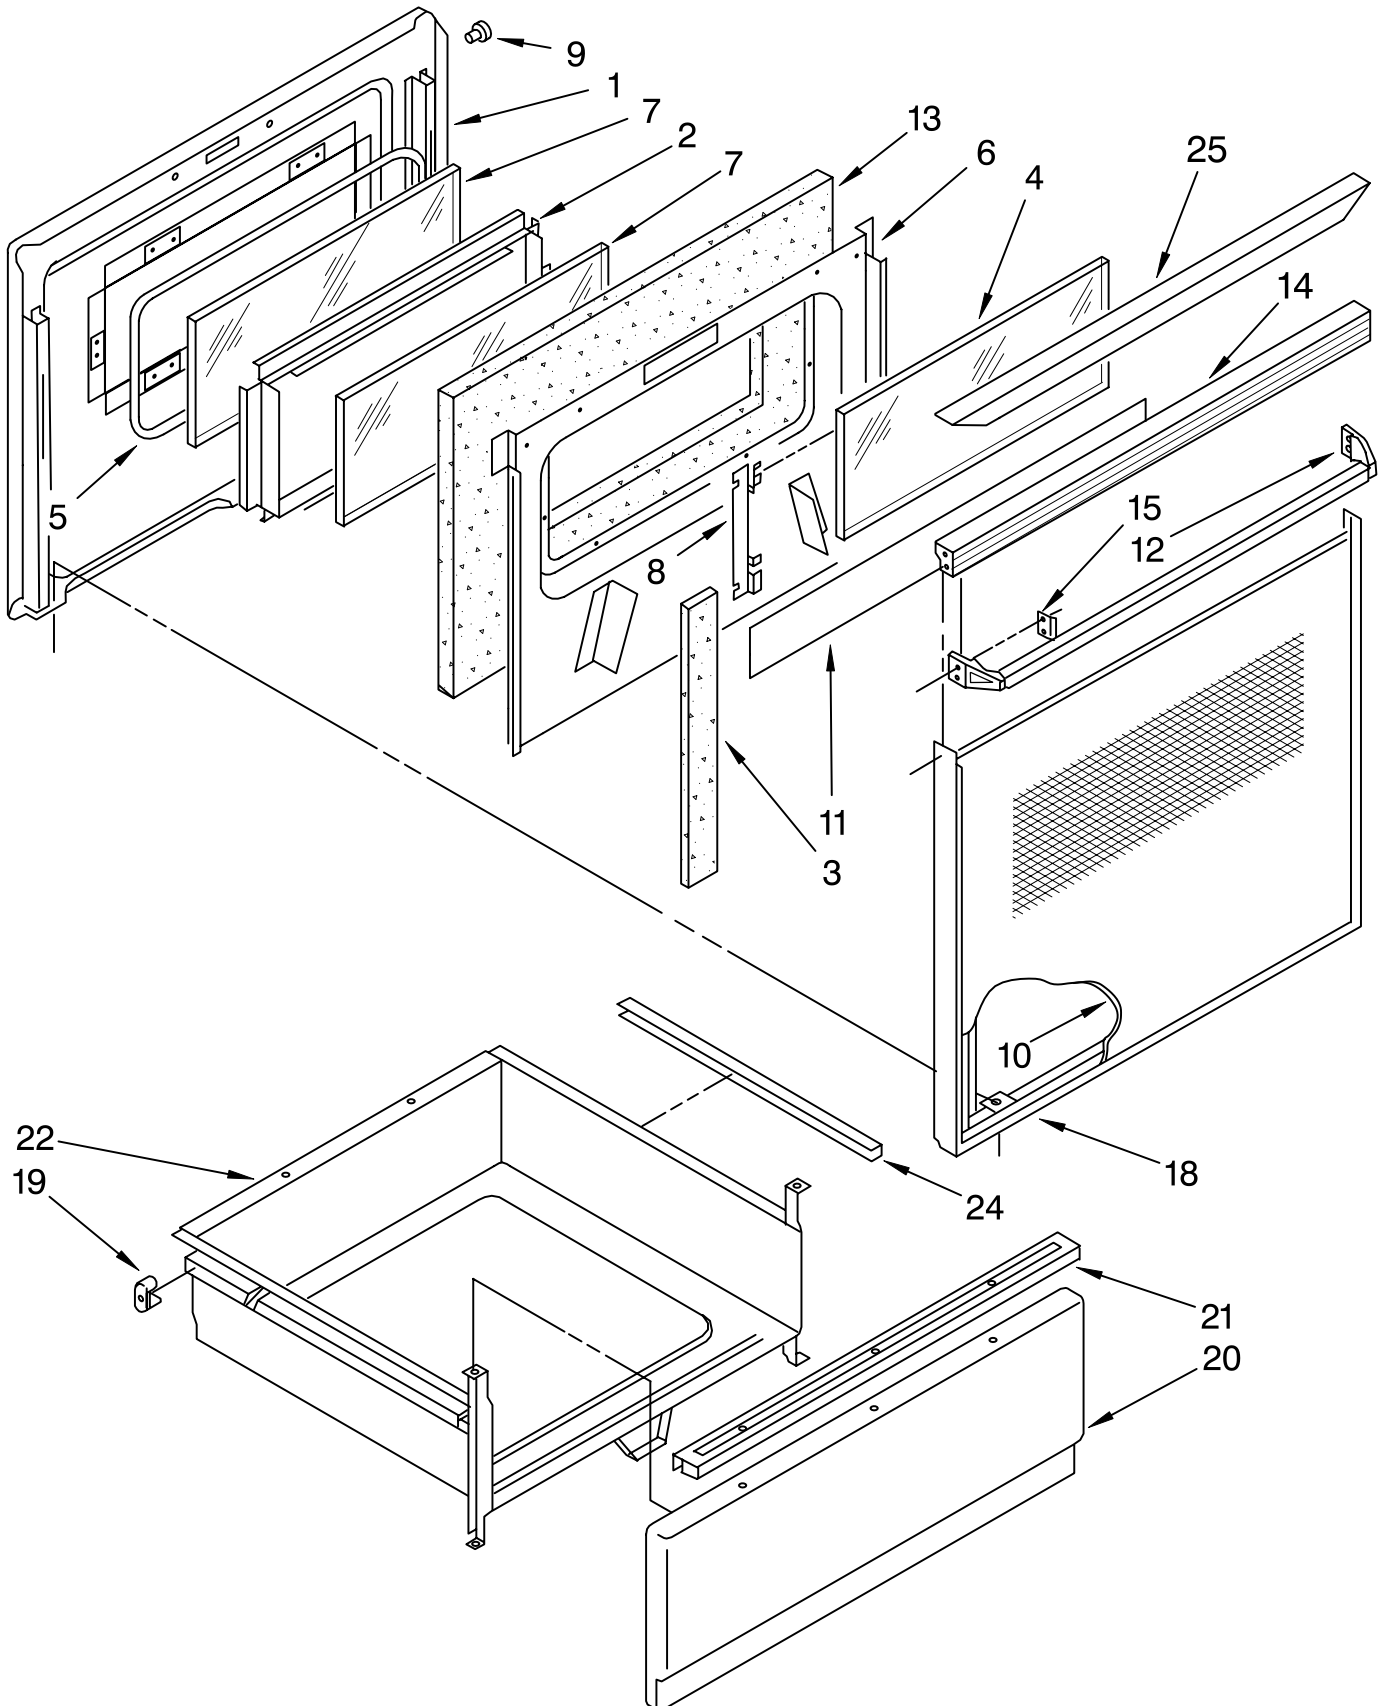

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# DOOR AND DRAWER PARTS

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2  
(White) (Almond) (Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	3172218	Liner, Door
2	3148234	Frame, Glass
	3148443	Screw (6)
3	3148441	Seal, Foam
4	3169202	Glass, Clear
5	3148183	Seal, Window
6	3148159	Retainer, Insulation
	3148443	Screw (4)
7	3169203	Glass, Inner-Outer
8	3148187	Retainer, Glass (2)
	3148443	Screw (4)
9	3148182	Bumper (4)
10		Glass, Door
	3148185	Black
	3149049	White
11	3169191	Foil
12		Handle, Door
	3148228	Black
	3149354	Platinum
	355515	Screw (4)
13	3147951	Insulation, Door
14		Top, Door
	3148223	Black
	3149355	Panoramic Grey
15	3148282	Clip (2)
18	3148235	Frame, Glass
	307748	Screw (3)
	3393008	Screw, (5)
		Designer White Mdl
19	307980	Glide, Rear
	3393008	Screw (2)
20		Panel, Drawer
	307935	White
	307939	Almond
	309923	black
	313349	Screw (3)
		8-18 x 1/2
21	3169105	Handle, Drawer
	313349	Screw (2)
22	327887	Drawer, Utility
24	309329	Protector, Drawer (2)
25	3181363	Cap, Top
		Designer White Mdl
	3182346	Screw (2)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2  
(White) (Almond) (Black) (Designer White)

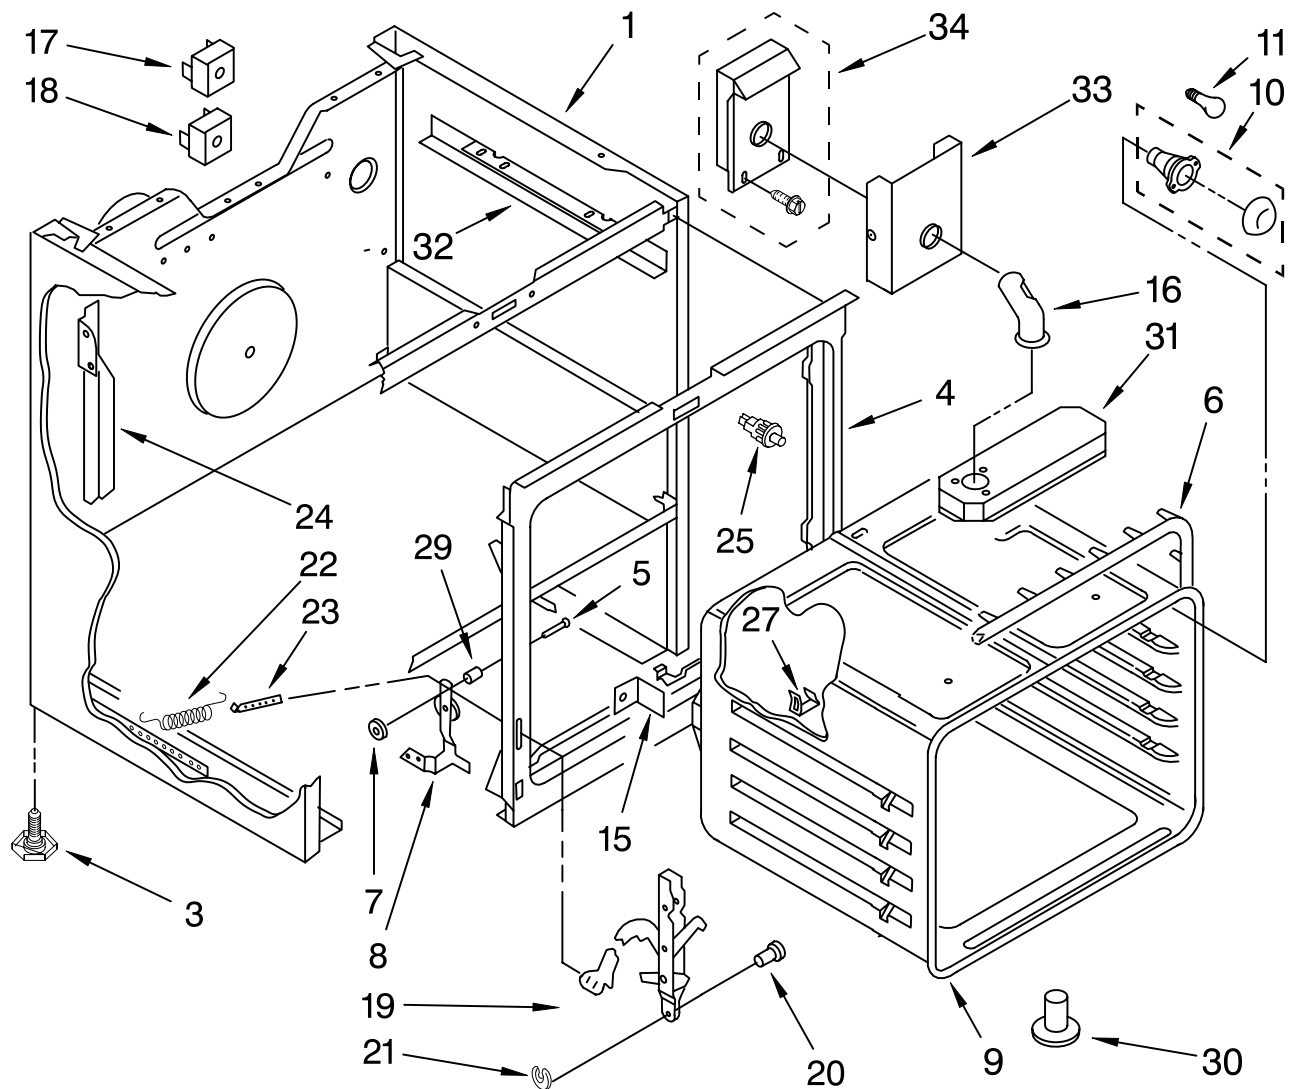

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS


For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2  
(White) (Almond) (Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
NOTE: The screws and nuts required to attach a part are listed immediately following that part.			8	3176710	Hinge, R.H.	23	308125	Anchor, Spring (2)
				3176711	Hinge, L.H.	24	313196	Support, L.H. Channel
				343641	Screw, 10-16 x 1/2 (4)		313197	Support, R.H. Channel
1		Main Chassis	9	3176611	Oven (30" Pyro)		343641	Screw, 10-16 x 1/2 (4)
	330086	White		311056	Screw (3)	25	310345	Switch, Door
	330090	Almond	10	3150505	Socket Assembly	27	313382	Clip, Therm Bulb (2)
	3181515	black	11	311255	Bulb, Oven Light	29	309111	Snubber, Door (2)
	690989	Screw, 10-32 x 1/2	15	311220	Bracket, Oven Mounting	30	3169109	Tube, Vent
	343641	Screw, 10-16 x 1/2 (2)		343641	Screw, 10-16 x 1/2 (4)	31	3169129	Box, Vent
	247326	Screw 10-24x1/2	16	3148906	Vent, Oven		343641	Screw (3)
3	312701	Leg Leveling (4)		253549	Screw, 10A x 1/2 (3)	32	3147646	Support, Chassis (2)
4	3176718	Frame, Front	17	314209	Switch, Broil		313638	Screw, (2) #8-18 x 1/2
	311056	Screw (2)		314215	Screw #6	33	3149006	Shield, Box
	3150537	Screw (1)	18	314210	Switch, Bake		98520	Screw (2)
5	307985	Pin, Hinge		314215	Screw #6	34	3171381	Box, Vent
6	3169251	Seal, Door	19	3176709	Channel, Arm (2)		313349	Screw (2)
7	308306	Pushnut	20	307986	Hinge Pin (2)			
			21	307594	Ring, Retainer (2)			
			22	308126	Spring, Oven Door (2)			



# WIRING HARNESS PARTS

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2  
(White) (Almond) (Black) (Designer White)

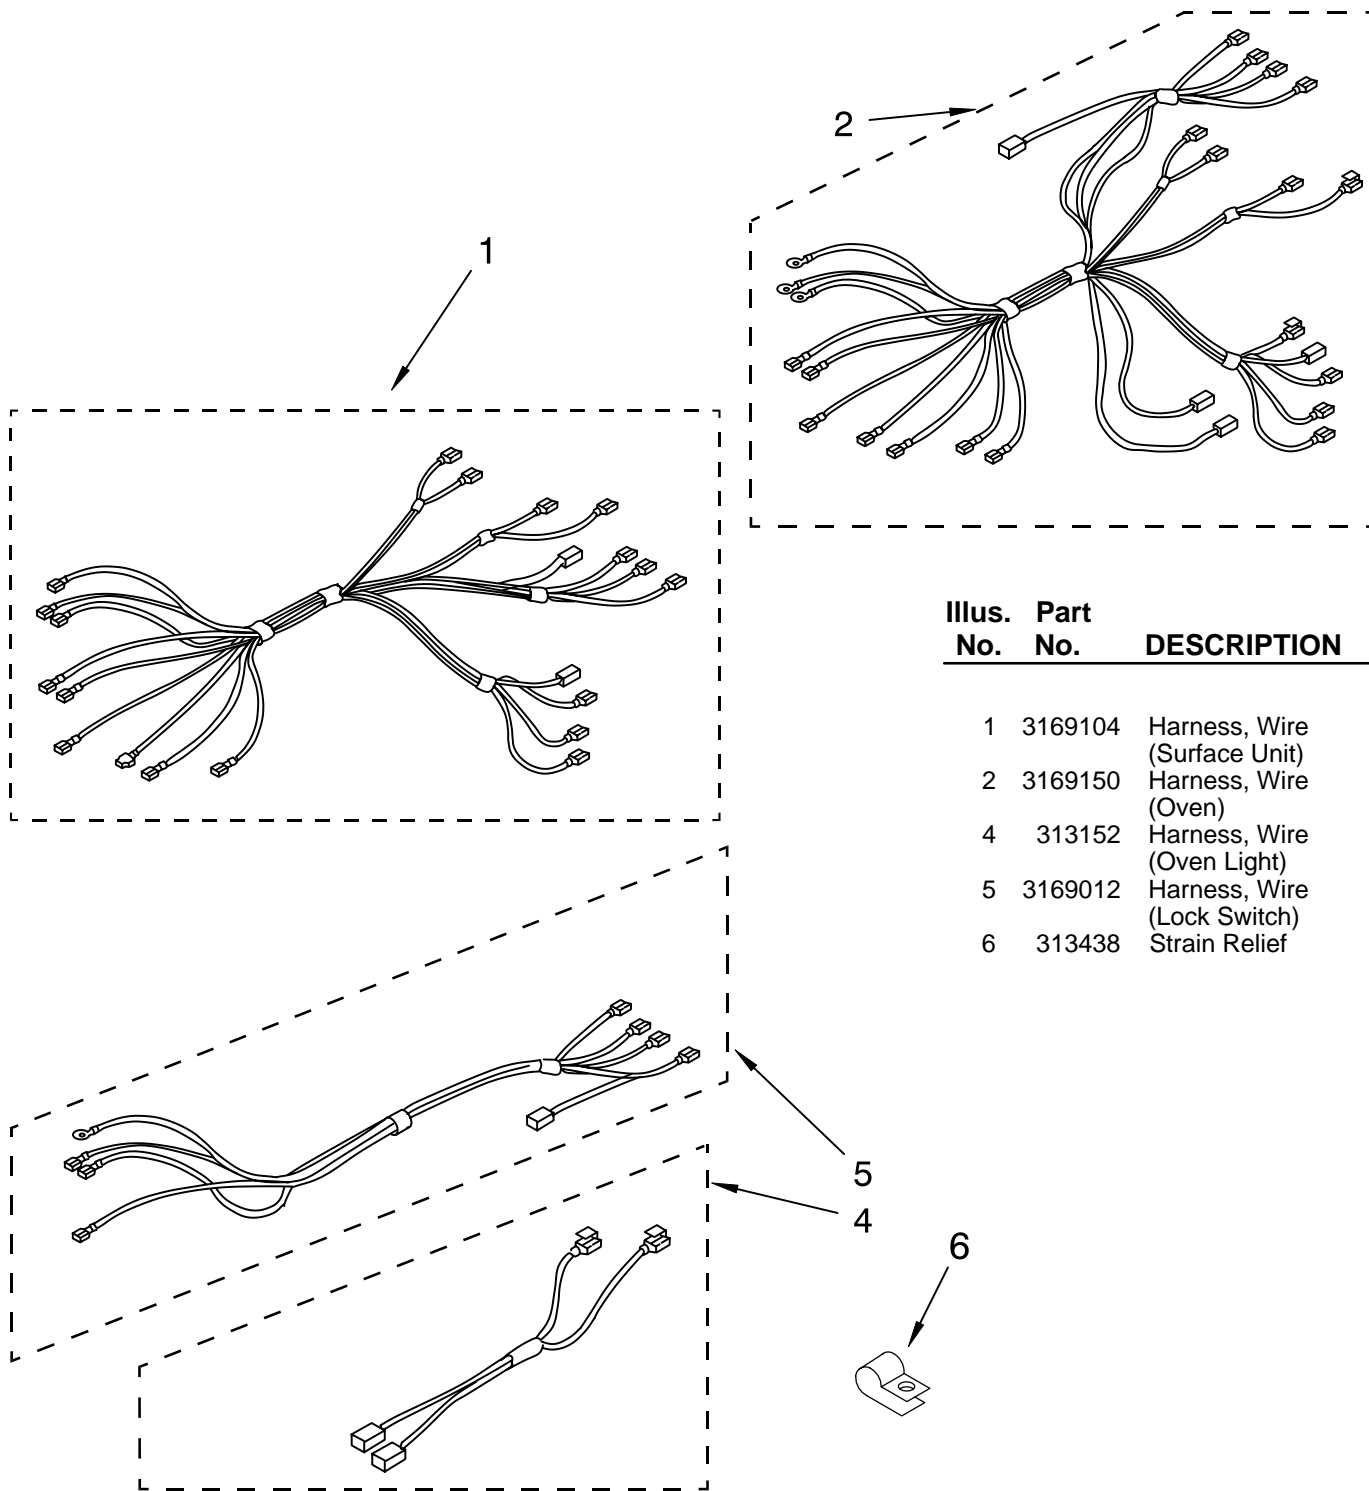

<b>Illus. No.</b>	<b>Part No.</b>	<b>DESCRIPTION</b>
1	3169104	Harness, Wire (Surface Unit)
2	3169150	Harness, Wire (Oven)
4	313152	Harness, Wire (Oven Light)
5	3169012	Harness, Wire (Lock Switch)
6	313438	Strain Relief

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OPTIONAL PARTS NOT INCLUDED

For Model: RF366PXYW2, RF366PXYN2, RF366PXYB2, RF366PXYQ2  
(White) (Almond) (Black) (Designer White)

Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION	Illus. Part No. No. DESCRIPTION
<b><u>SPLICING WIRES--25FT. LENGTH</u></b>	<b><u>PAINT, TOUCH-UP (1/2oz.)</u></b>	<b><u>REFINISHING MATERIAL</u></b>
242820 Wire, Black 14 Ga. 150°c	72017 White	799832 Kit, Porcelain Repair (White)
242821 Wire, Blue 14 Ga. 150°c	72107 Almond	242756 Touch-Up Self-Clean (1/2 Pt.)
242822 Wire, Brown 14 Ga. 150°c	72109 New Avocado	261582 Grease
242830 Wire, Brown 14 Ga. 200°c	72108 Coffee	
242823 Wire, Green 14 Ga. 150°c	72110 Harvest Gold	
242824 Wire, Orange 14 Ga. 150°c	72112 Toast	
242829 Wire, Red 12 Ga. 150°c	72113 Platinum	
242825 Wire, Red 14 Ga. 150°c	*511873 White Porcelain (2 Oz.)	
242831 Wire, Red 14 Ga. 200°c		<b><u>INSULATION</u></b>
242826 Wire, White 14 Ga. 150°c		261514 Insulation, Fiberglass (1-1/2" x 24" x 120")
242827 Wire, Yellow 14 Ga. 150°c		240132 Insulation, Fiberglass (2-1/2" x 22" x 120")
242832 Wire, Yellow 14 Ga. 200°c		
	<b><u>PAINT, PRESSURIZED SPRAY (13 oz.)</u></b>	
	350930 White	
	350956 Almond	
	261888 New Avocado	
	261886 Coffee	
	261890 Harvest Gold	
	285365 Toast	
	285366 Platinum	
	285006 Superior Black	
	206922 Primer (White)	
	206925 Leveler (Thinner) (2 oz.)	
		<b><u>ANTI-TIP KIT</u></b>
		814234 Anti-Tip Kit (Wall Mount)
		<b><u>ACCESSORY PARTS</u></b>
		241430 Foil, Aluminum Oven (18" x 25')
		814009 Glass Cleaner
<b><u>LITERATURE PARTS</u></b>		<b><u>Following May Be Purchased</u></b>
LIT3187321 Installation Instructions	799344 White (Uncut)	<b><u>DO-IT-YOURSELF REPAIR MANUALS</u></b>
LIT3150400 Intallation Instr (Templet)	978883 Almond (Uncut)	
LIT3181612 Wiring Diagram	261887 Coffee (Uncut)	
LIT3182687 Video, Ceran Cooktop	261891 Harvest Gold (Uncut)	
LIT3187477 Guide, Use & Care	285367 Toast (Uncut)	LIT677973 Manual, Range
	285368 Platinum (Uncut)	
	*Note: Cooktop Surface is Porcelain; All Other Panels are Painted Surfaces.	

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST